



JK part numbers:
J10652
OEM part number:
Not applicable

Page 1 of 1


justKAMPERS.COM
Tech Sheet

This product is suitable for:
T2 Bay Window (1968-79)

Belt up in the back!

Fitting rear seat belts to a 1968-79 bus

Post August 1967 models that have the second digit of the chassis number as a 2, 3 or 4 all have the mountings fitted from the factory (1).

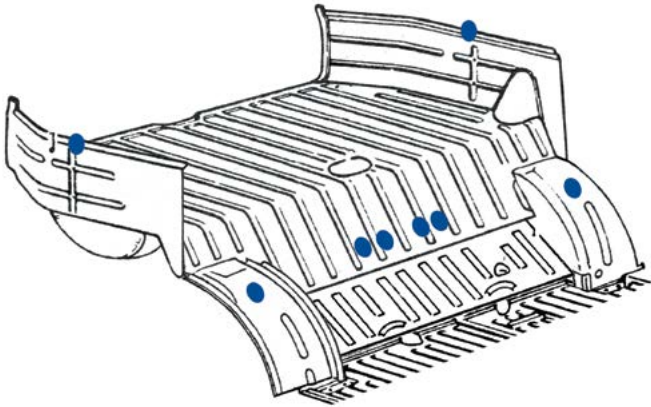

1. Factory fitted mountings

Depending on the layout of your Camper interior, you should be able to fit lap belts and/or 3 point inertia reel belts (2).

On models that do not have mounts as standard, you can drill your own holes in the rear bulk head (3) / wheel arch tubs (just behind the rear bulk head is the fuel tank so please be careful).

If you do not have factory fitted mounting points and have drilled your own holes, you will need to install a stress plate (JK part no. J11582) on each mounting point to ensure the bolt can not pull through the body work in the case of an accident.

PLEASE NOTE: please ensure that any mounts are installed by someone who is capable of welding to MOT standards.

PLEASE NOTE: It is very important on Campers that cushions are very well fixed (4), otherwise in an accident, the cushions may move and the seat belt can become a noose ... food for thought.

If you have any doubts about fitting seat belts or the condition of your existing belts, please contact a reputable garage ... Be safe not sorry.



2. Inertia reel seat belts



3. Non standard seat belt mounting in rear bulkhead



4. Make sure cushions are very well fixed!

www.justkampers.com
0845 1204582

Just Kampers, Unit 1 Stapeley Manor, Long Lane, Odiham, Hants. RG29 1JE
NB. Please note that whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.