

DEVON ROOF CAP

T2 BAY WITH DEVON ROOF 1967-1979

JK Part Numbers: J11649 and J11671

To install the Devon roof cap you will need the following tools:

- A marker pen
- A drill
- A spanner
- A selection of G-clamps

NOTE: To remove your old skylight you will either need a screwdriver or a spanner. We suggest that two people are used when lifting the cap on or off a vehicle.



FITTING GUIDE



1. Remove old skylight and clean roof of dirt and debris.



2. Trial fit the cap onto your roof

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.

DEVON ROOF CAP

T2 BAY WITH DEVON ROOF 1967-1979


JK Part Numbers: J11649 and J11671




3. Trial fit the cap onto your roof. From the inside, offer up your funnel and mark the skylight hole location



4. Remove the cap and turn upside down. Offer up the funnel again and mark the OUTSIDE edge of the cap

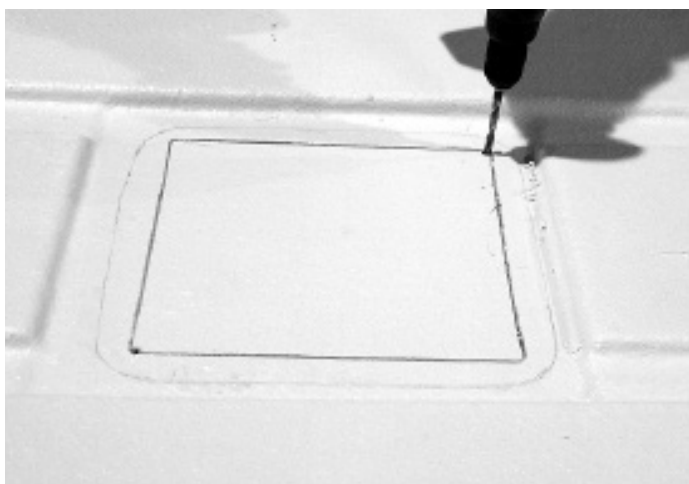

5. Drill pilot holes

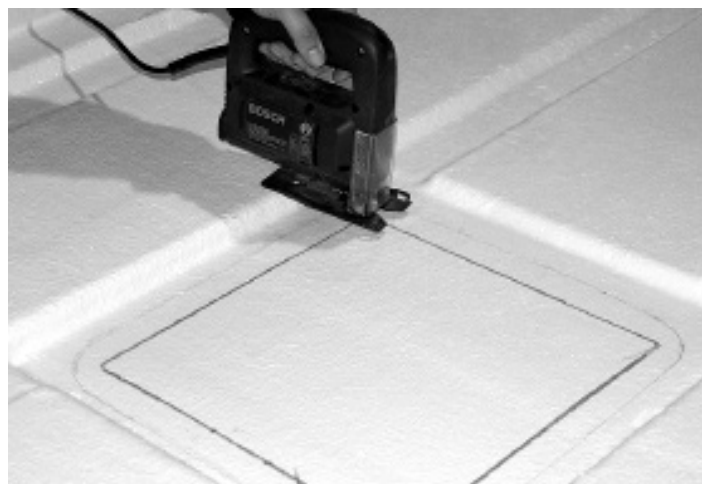


6. Cut your skylight hole, using the outside marks as your guide

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.

DEVON ROOF CAP

T2 BAY WITH DEVON ROOF 1967-1979

JK Part Numbers: J11649 and J11671

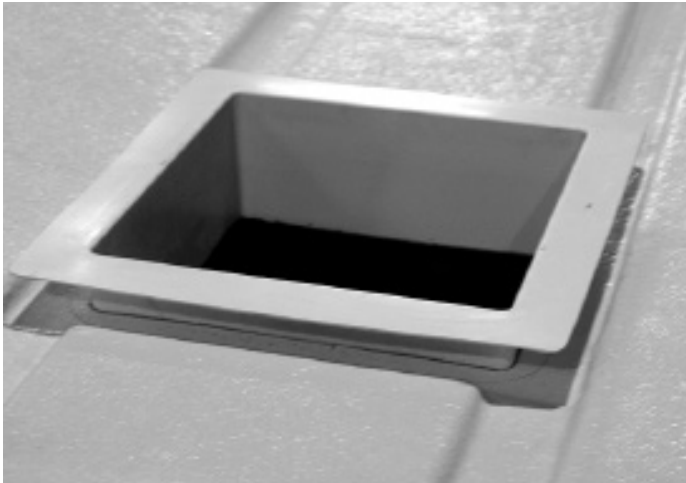

7. Trial fit the funnel, if the hole is too small you may have to file it slightly until it fits



8. Mark the funnel to the height of your skylight

At this point you will need to determine the height of your funnel. To do this you will need to place a straight edge across the bottom of your skylight and measure the inside distance between the top and bottom.

Place your cap back on your roof, trial fit the funnel and starting from the cap measure up the funnel the distance of inside the skylight.



9. Cut your funnel to its new height

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.

DEVON ROOF CAP

T2 BAY WITH DEVON ROOF 1967-1979

JK Part Numbers: J11649 and J11671



10. Apply the adhesive to the roof, clamp down and leave for at least 12 hours for the adhesive to set



11. Mark where to drill for coachbolt



12. Drill hole, making sure you go through the roof cap and the rim of the old roof



13. Fit a coach bolt and tighten gently until firm

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.

DEVON ROOF CAP

T2 BAY WITH DEVON ROOF 1967-1979

JK Part Numbers: J11649 and J11671



14. Bolt up the funnel and install the skylight mechanism



15. Fit your new skylight



16. Chock your roof up with 43cm long pieces of wood




17. Undo the strut support

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.


DEVON ROOF CAP

T2 BAY WITH DEVON ROOF 1967-1979

JK Part Numbers: J11649 and J11671

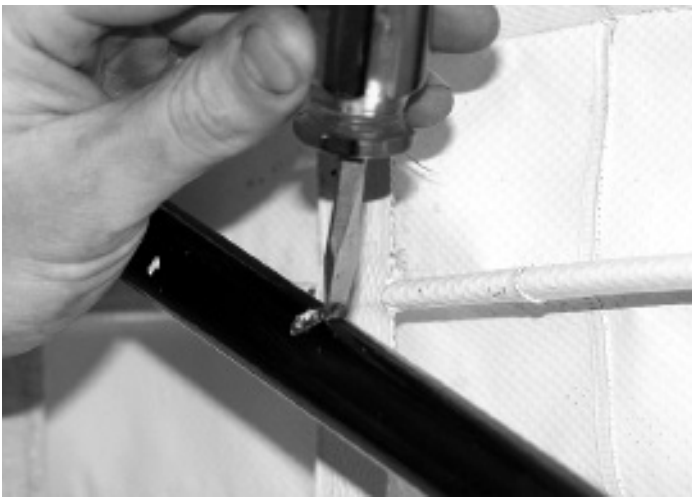

18. Undo the grub screw

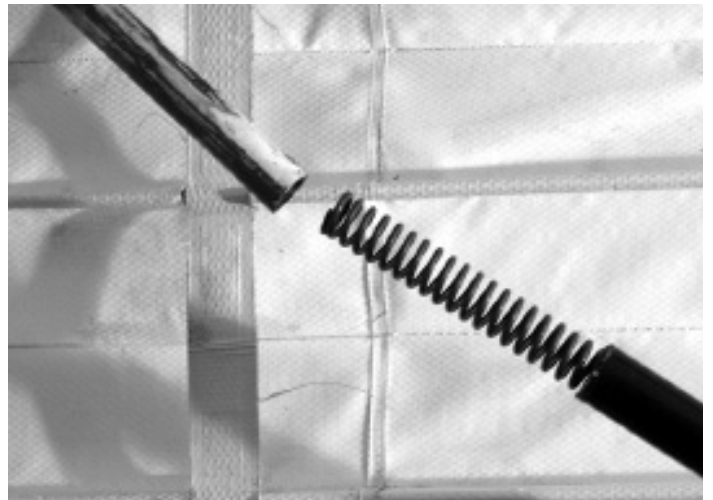

19. Remove the old spring. Fit the new one in

Devon roof seals

Having covered your old roof, now's the time to consider replacing the seals on your Devon roof.



J11018

Devon edging trim between static section of roof and vehicle roof. (sold per metre)



J11347

Seal between static & elevating section of devon roof. (sold per metre)



J11628

Devon roof 'J' seal. (sold per metre)

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.