


CAB WIND AND RAIN DEFLECTORS

T25 1980-1991


JK part numbers: J11739

1. Roll down the window, wash the window channel of any debris using a clean rag and allow to dry.

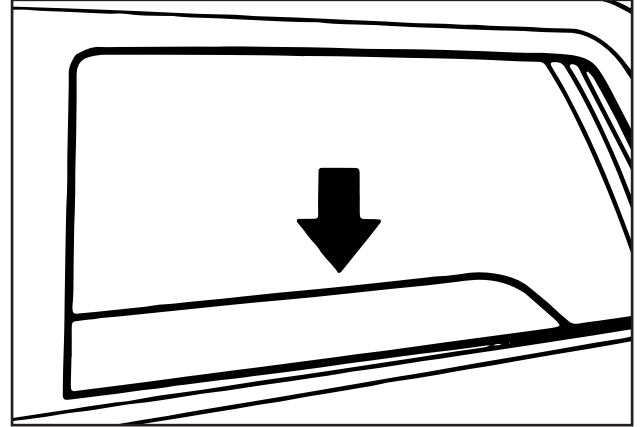


1. Roll down the window and clean the channel

2. Remove the protective film from the adhesive strips then slide up the front edge of the deflector into of top of the window channel first, followed by the rear.

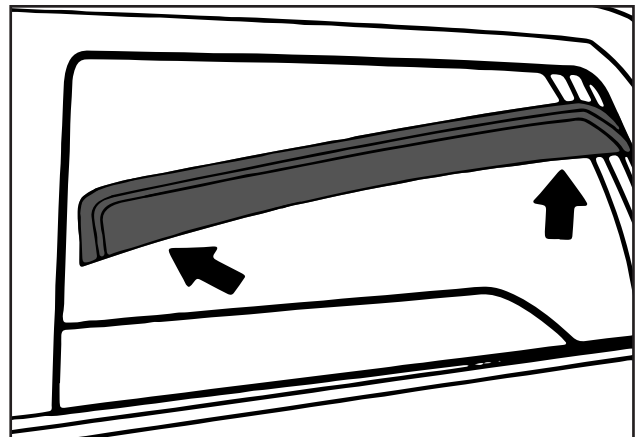

2. Remove protective film and install front edge first

3. Slowly roll up the window, checking that the deflector does not foul the glass. Once you are happy with the fit, close the window and allow 12 hours for the adhesive strips to fully bond.

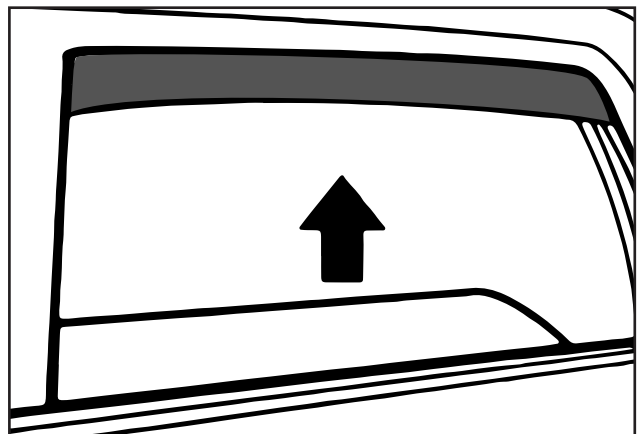

3. Roll up window and if fit is okay, allow to bond

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.