

JAIL BAR


**PART NUMBERS: J12122, J13855, J15047
T2 BAY 1964-1979**

T2 SPLIT 1950-1964 *NOTE: Cut down the length of the bars to suit the smaller windows*
J12123 T25 1979-1992

JK part numbers: J12122, J12123, J13855, J15047

FITTING GUIDE

Both the Type 2 and T25 jail bars are pre-cut to the correct size to fit the window on your van. You will find the top bar slightly smaller in length to match the profile of the window frame.

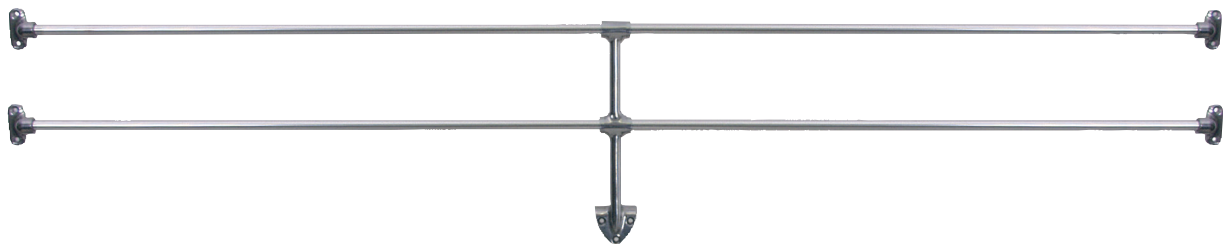

1. First find the centre of the rear window and mark it. Align the middle of the centre bracket on the mark and mark the position of the fixing holes. Drill the fixing holes making sure to use the correct drill bit for the screws provided.



N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.

JAIL BAR

PART NUMBERS: J12122, J13855, J15047


T2 BAY 1964-1979

T2 SPLIT 1950-1964 *NOTE: Cut down the length of the bars to suit the smaller windows*

J12123 T25 1979-1992

JK part numbers: J12122, J12123, J13855, J15047

2. Attach the centre bracket to the van. Now slide the bars through the two holes within the centre bracket making sure the smaller bar is on top. Fit the four end brackets to the bars. Mark the hole positions on the end brackets on the tailgate, making sure the bracket has not protruded onto the tailgate seal. Once again, drill the holes and fix the end brackets.

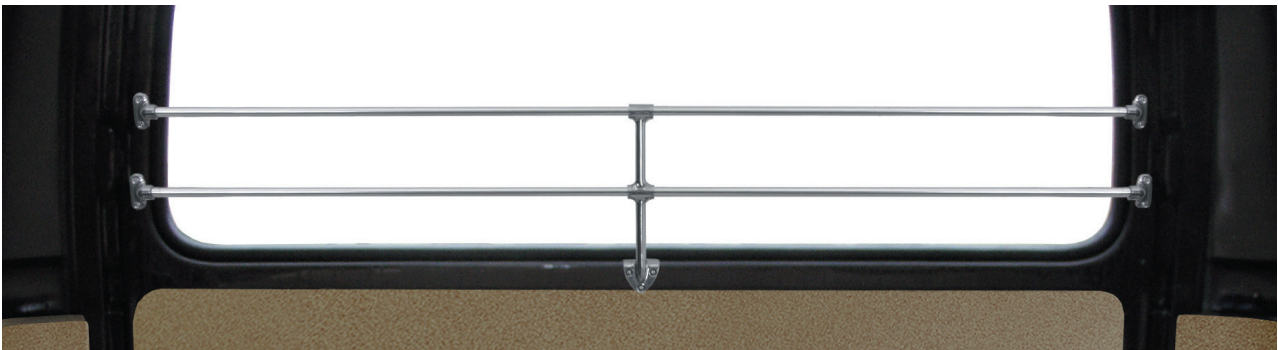

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.