

2 BOW ROOF RACK

T2 ALL MODELS - REAR FIT

T2 BAY - 1967-1979 - FRONT FIT

JK Part Number: J12628



Before you start, check you have all the components


- (a) 2 bows
- (b) 11 wooden slats with two holes
- (c) 2 wooden slats with four holes
- (d) 4 corner tubes
- (e) 2 joining clamps
- (f) 8 uprights
- (g) 2 uprights incorporating screws
- (h) 4 gutter clamps
- (i) 1 bag of hardware

NOTE: Also includes 1 strip of rubber and 1 allen key

Tools

1. A large flat bladed screwdriver
2. A 13mm spanner

Note: An allen key is provided

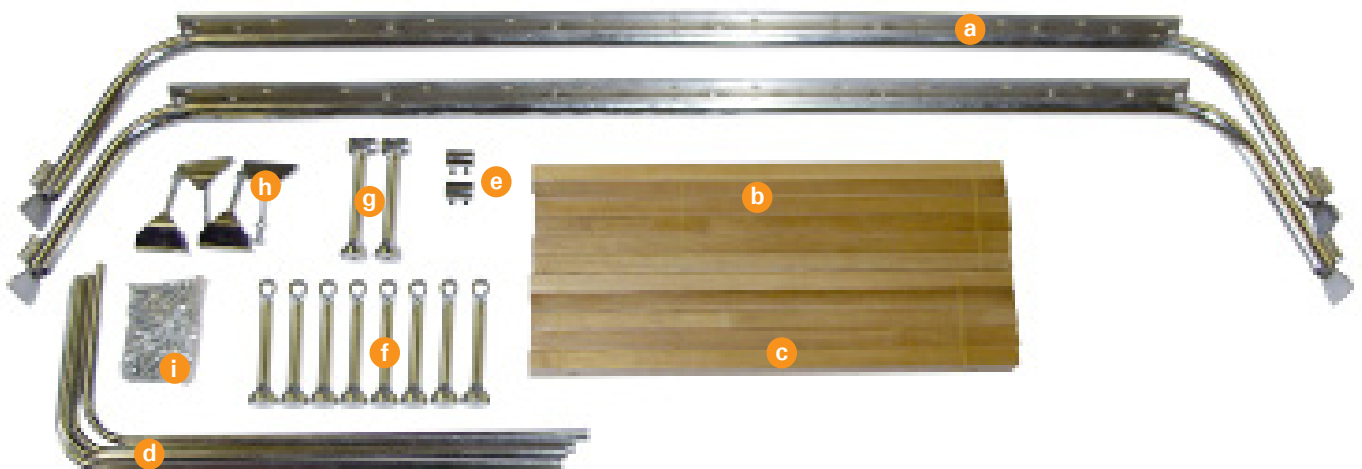

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.

2 BOW ROOF RACK

T2 ALL MODELS - REAR FIT

T2 BAY - 1967-1979 - FRONT FIT

JK Part Number: J12628

Tips


- To ensure perfect alignment, assemble the roof rack finger tight.
- Then place the rack on your vans roof.
- When you are happy with the fit, tighten all of the bolts using the correct tools.
- Fitting requires 2 people.
- Take your time and pay particular care to avoid scratching your vehicles paintwork.

FITTING GUIDE

1. First place the 2 bows (a) parallel, with the mounting brackets facing inwards.

Then using the 2 wooden slats with the four holes (c), fix these to the outermost holes on the bows.

Use a flat headed bolt from the top and lock nut underneath. Do not tighten fully.

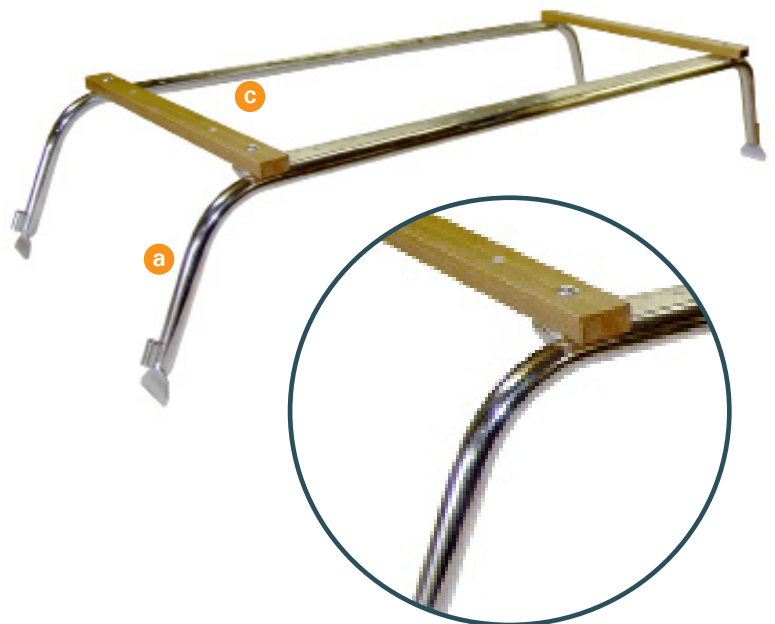

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.

2 BOW ROOF RACK


T2 ALL MODELS - REAR FIT

T2 BAY - 1967-1979 - FRONT FIT

JK Part Number: J12628


2. Place two uprights (f) onto the curved part of a corner tube (d) and repeat with the three remaining tubes.

With the two remaining uprights which have grub screws incorporated (g), slide onto the long end of any two of the four bars.

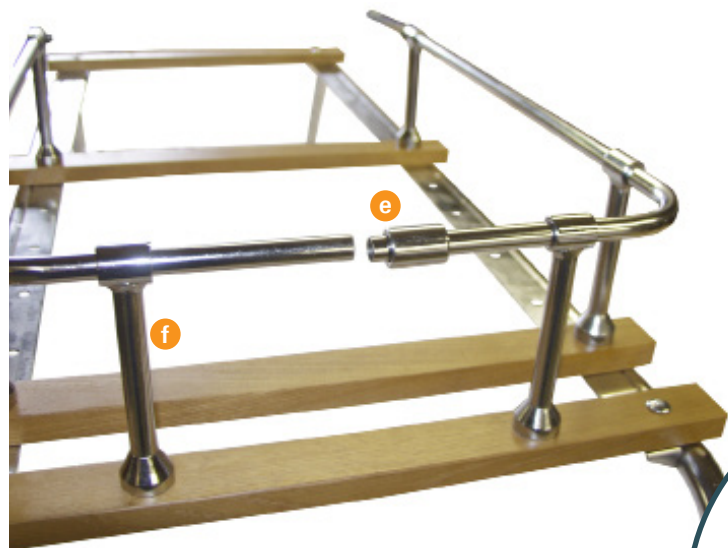

3. These four corner tubes and uprights can then be bolted to the wood as shown.

The four tubes are then held together using the joining clamps (e) and the two uprights (f).

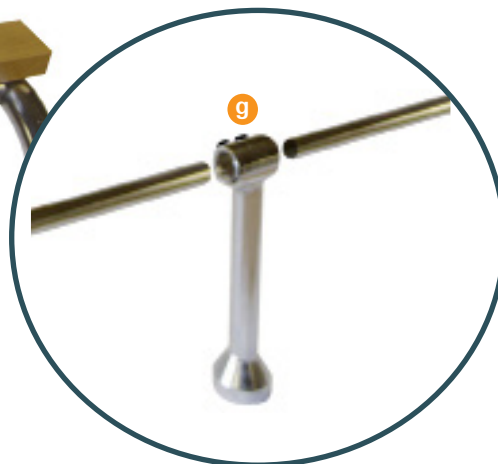

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.


2 BOW ROOF RACK

T2 ALL MODELS - REAR FIT

T2 BAY - 1967-1979 - FRONT FIT

JK Part Number: J12628

4. Finally all that remains is to bolt on the rest of the wooden slats, cut and stick the self adhesive rubber onto the feet to protect your vans gutters and using a second person, carefully place the rack onto your vans roof and tighten it up.

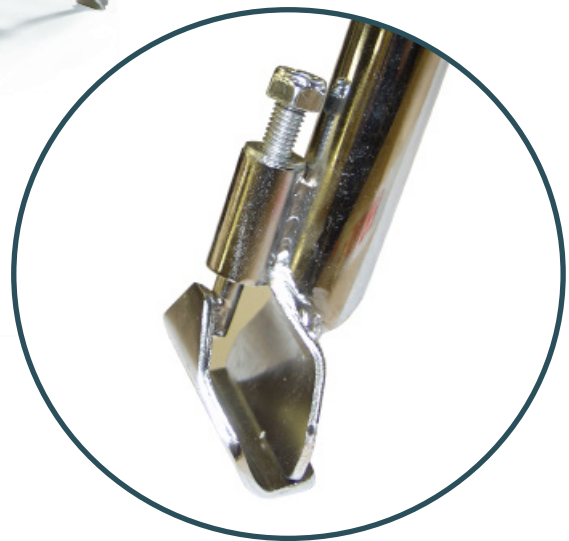

Taking care of your roof rack

If you plan to use your roof rack all year round, keep it clean, touching up any scratches when they happen and treating the wood with wood preservative from time to time (Available from all good DIY stores) will help keep it looking as good as new.

N.B. Whilst every attempt is made to ensure that these instructions are as accurate and clear as possible, we cannot be held responsible for misinterpretation of these instructions or for any subsequent accident or damage caused through mis-fitted parts.