

# GUIDE TO PREPARING YOUR VAN FOR YOUR SOLUTION BED INSTALLATION

**JK**

Preparing your Van For its JK Solution Bed Installation.

Don't worry, your van is in safe hands. Soon your JK solution bed system will be installed, and you can enjoy some new adventures.

First things first, you will be contacted by Dub Van Styling who are Just Kampers, authorised fitters. The Just Kampers Solution Bed System is required to be professionally installed due to the complexity of fitting and to ensure your guarantee is not invalidated.

Dub Van Styling conversion experts are fully trained and certified to install the JK Solution Bed System so sit back, relax, your van is in safe hands.


How to Find Dub Van Styling:

Dub Van Styling is located next door to Just Kampers Head Office in the Hampshire village of Odiham.

Sat Nav GPS Coordinates:

Longitude -0.912329, Latitude 51.225759

Directions from the M3 motorway.

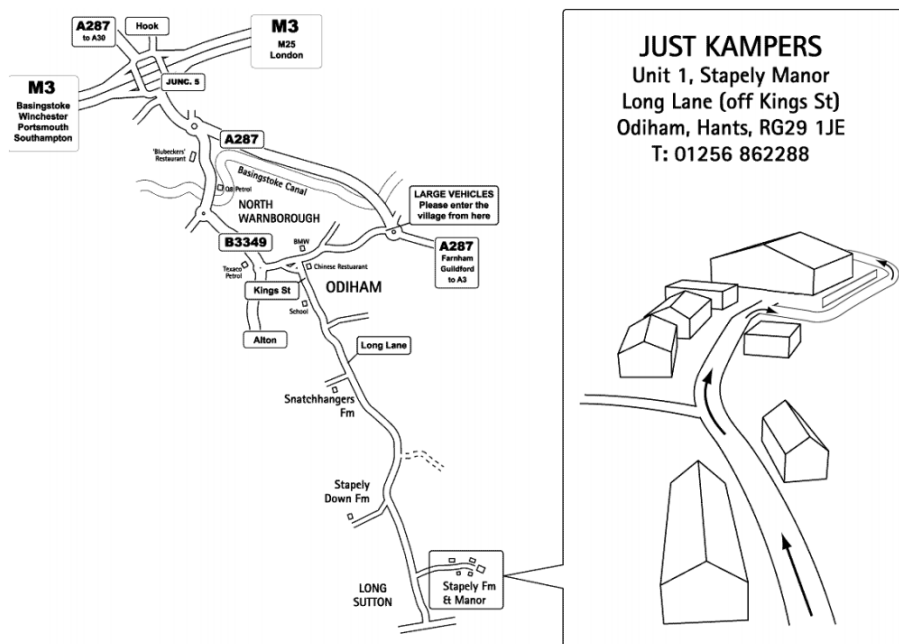

FIND ALL OUR CONVERSION PRODUCTS AT [JUSTKAMPERS.COM](https://www.justkampers.com)

When you have your installation date please follow the below :

- 1) Please supply your locking wheel nut key as the spare wheel will need to be removed to access and secure your new floor / rail system.
- 2) Please remove any pre-installed interior:  
Fixtures.  
Fittings.  
Any factory fitted bulkheads.  
Removal of these items will help speed up the process of fitting for you and prevent any additional cost.
- 3) Upon arrival your Transporter should be completely empty and the floor bare.  
The sidewalls if panelled, insulated or covered in carpet are fine to be left as they are.
- 4) If you are unable to remove any fittings / fixtures, please inform Dub Van Styling prior to your installation date to discuss the removal as this may incur a separate charge.

**Your van floor should look like this when it is dropped off for installation**

